

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Dual Pressure SW	90980-11149	B10	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150
A 2	A/C Magnetic Clutch	90980-11271	B11	Back Window Limit SW	90980-11247
A 3	A/T Fluid Temp. Sensor	90980-10498	B12	Back Window Motor	90980-11003
A 4	ABS Actuator	90980-10891	B13	Buckle SW LH	90980-11212
A 5	ABS Actuator	90980-11413	B14	Blower Motor Linear Controller	90980-11676
A 6	ABS Relay	90980-10940	B15	Blower Resistor (Low)	90980-10916
A 7	ABS Relay	90980-10939	B16	Body ECU	90980-10921
A 8	ABS Speed Sensor Front LH	90980-11075	B17	Body ECU	90980-11321
A 9	ABS Speed Sensor Front RH		B18	Back Door ECU	90980-11423
A10	ADD Position SW	90980-11250	B19	Buckle SW RH	90980-11212
A11	Auto Antenna Motor	90980-11003	C 1	Camshaft Position Sensor	90980-10947
A12	A/C Amplifier	90980-10801	C 2	Crankshaft Position Sensor (5VZ-FE)	
A13	A/C SW	90980-11280		Crankshaft Position Sensor (3RZ-FE)	90980-11016
A14	A/C Thermistor	90980-10825	C 3	Cruise Control Actuator	90980-11150
A15	ABS Deceleration Sensor	90980-11182	C 4	Cigarette Lighter	90980-10760
A16	ABS ECU	90980-11565	C 5	Cigarette Lighter Illumination	90980-11148
A17	ABS ECU	90980-11390	C 6	Circuit Opening Relay	82602-35150
A18	ADD Control Relay	90980-10173	C 7	Clock	90980-11013
A20	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C 8	Clutch Start Cancel SW	90980-11533
A21	Airbag Squib (Steering Wheel Pad)	90980-10850	C 9	Clutch Start SW	90980-10825
A22	Ashtray Illumination	90981-11041	C13	Combination SW	90980-11672
A23	Auto Antenna Control Relay	90980-10799	C14	Combination SW	90980-11616
A24	ABS Speed Sensor Rear LH	90980-11075	C15	Combination SW	90980-11594
A25	ABS Speed Sensor Rear RH		C16	Cruise Control Clutch SW	90980-10906
A26	A/C Ambient Temp. Sensor	90980-11070	C17	Cruise Control ECU	90980-11391
A27	Air Fuel Ratio Sensor	90980-11178	C18	Cruise Control Actuator with ECU	90980-11677
A28	Airbag Sensor Front LH	90980-11856	C20	Center Airbag Sensor Assembly	90980-11873
A29	Airbag Sensor Front RH		C21	Center Airbag Sensor Assembly	90980-11872
A30	A/C Amplifier	90980-11391	C22	Center Airbag Sensor Assembly	90980-11871
A31	A/C Amplifier	90980-11390	C23	Center Cluster SW	90980-11923
A32	A/C Magnetic Clutch Relay	90980-10801	C24	Center Cluster SW	90980-11321
A33	A/C Room Temp. Sensor	90980-10825	C25	Combination Meter	90980-11113
A34	A/C Solar Sensor	90980-11369	C26	Combination Meter	90980-11116
A35	Air Inlet Control Servo Motor	90980-11319	C27	Combination Meter	90980-11497
A36	Air Mix Control Servo Motor and A/C Water Temp. Sensor	90980-11529	C28	Combination Meter	90980-11475
A37	Air Vent Mode Control Servo Motor	90980-11321	C29	Combination Meter	90980-11115
B 1	Back-Up Light SW	90980-11250	D 1	Data Link Connector 1	90980-11323
B 2	Brake Fluid Level Warning SW	90980-11207	D 2	Daytime Running Light Resistor	90980-10928
B 3	Back Door Lock Control SW	90980-10604	D 3	Detection SW (Transfer 4WD Position)	90980-11156
B 5	Back Window Lock SW	90980-10801	D 4	Detection SW (Transfer L4 Position)	
B 6	Blower Motor	90980-10385	D 5	Detection SW (Transfer Neutral Position )	90980-10923
B 7	Blower Resistor	90980-10171	D 7	Data Link Connector 3	90080-98012
B 8	Blower SW	90980-10463	D 8	Daytime Running Light Relay (Main)	90980-10819
B 9	Back Door Courtesy SW	90980-11003	D 9	Daytime Running Light Relay No.4	90980-10759

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
D10	Defroster Mode SW	90980-10825	E14	Engine Control Module	90980-11638
D11	Diode (Back Window)	90980-11251	E15	Extra High Speed Relay	90980-10221
D12	Diode (Daytime Running Light No.1)	90980-10962	F 1	Front Parking Light LH	90980-11149
D13	Diode (Daytime Running Light No.2)		F 2	Front Parking Light RH	
D16	Door Courtesy SW Front LH	90980-11097	F 3	Front Turn Signal Light LH	90980-11019
D17	Door Courtesy SW Front RH		F 4	Front Turn Signal Light RH	
D18	Door Courtesy SW Rear LH		F 5	Front Wiper Motor	90980-10551
D19	Door Courtesy SW Rear RH		F 7	4WD ECU	90980-11423
D20	Door Key Lock and Unlock SW Front LH	90980-11245	F 8	Front Door Speaker LH	90980-10935
D21	Door Key Lock and Unlock SW Front RH		F 9	Front Door Speaker RH	
D22	Door Lock Control SW Front LH	90980-11013	F10	Fuel Sender and Fuel Pump	90980-11077
D23	Door Lock Control SW Front RH (w/o Power Window)		F11	Front Fog Light LH	90980-11003
	Door Lock Control SW Front RH (w/ Power Window)	90980-10797	F12	Front Fog Light RH	
D24	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150	G 1	Generator	90980-11349
D25	Door Lock Motor and Door Unlock Detection SW Front RH		G 2	Generator	90980-9212
	Door Lock Motor and Door Unlock Detection SW Rear LH		G 3	Glove Box Light	90980-11148
D26	Door Lock Motor and Door Unlock Detection SW Rear LH		H 1	Headlight LH	90980-11314
D27	Door Lock Motor and Door Unlock Detection SW Rear RH		H 2	Headlight RH	
	D28	Diode (Idle-Up)	90980-11071	H 3	Heated Oxygen Sensor (Bank 1 Sensor 1)
D29	Diff. Lock ECU	90980-10801	H 4	Heated Oxygen Sensor (Bank 1 Sensor 2)	
D30	Detection SW (Transfer Center Diff. Lock Position)	90980-11156	H 5	Horn LH	90980-10619
D31	Detection SW (Transfer 4WD Position)	90980-11250	H 6	Horn RH	
D32	Detection SW (Transfer H4L Position)	90980-11025	H 7	Hazard SW	90980-10801
E 1	EGR Gas Temp. Sensor	90980-10899	H 8	High Mounted Stop Light	90980-11162
E 2	Electronically Controlled Transmission Solenoid	90980-10919	I 1	Idle Air Control Valve	90980-11145
E 3	Engine Coolant Temp. Sensor	90980-10737	I 2	Igniter	90980-11653
E 5	Engine Control Module (3RZ-FE Except California)	90980-11390	I 3	Ignition Coil No.1	90980-11246
	Engine Control Module (California 3RZ-FE)	90980-11421	I 4	Ignition Coil No.2	
E 6	Engine Control Module (3RZ-FE Except California)	90980-11391	I 5	Ignition Coil No.3	
	Engine Control Module (California 3RZ-FE)	90980-11476	I 6	Injector No.1	
E 7	Engine Control Module (3RZ-FE Except California)	90980-11408	I 7	Injector No.2	
	Engine Control Module (California 3RZ-FE)	90980-11637	I 8	Injector No.3	
E 8	Engine Control Module (3RZ-FE Except California)	90980-11392	I 9	Injector No.4	
	Engine Control Module (California 3RZ-FE)	90980-11638	I10	Injector No.5	
E 9	Engine Control Module	90980-11421	I11	Injector No.6	
E10	Engine Control Module	90980-11476	I13	Ignition Key Cylinder Light	90980-10906
E11	Engine Control Module	90980-11586	I14	Ignition SW	90980-11615
E12	Engine Control Module	90980-11637	I17	Interior Light (Front)	90980-10935
E13	Engine Hood Courtesy SW	90980-11273	I18	Interior Light (Rear)	90980-10121
			I19	Ignition Coil and Igniter No.1	90980-11150
			I20	Ignition Coil and Igniter No.2	
			I21	Ignition Coil and Igniter No.1	90980-11885
			I22	Ignition Coil and Igniter No.2	
			I23	Ignition Coil and Igniter No.3	
			I24	Ignition Coil and Igniter No.4	

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J 1	Junction Connector	90980-11661	P19	Power Seat Motor (Driver's Seat Vertical Control)	90980-10825
J 2	Junction Connector		P20	Power Seat Motor (Front Passenger's Seat Reclining Control)	
J 3	Junction Connector	90980-11714	P21	Power Seat Motor (Front Passenger's Seat Slide Control)	
J 4	Junction Connector	90980-10976	P22	Power Steering Oil Pressure SW	90980-11428
J 5	Junction Connector	90980-10803	P23	Power Outlet (Rear)	90980-10760
J 6	Junction Connector		P24	Power Outlet Front LH	
J 7	Junction Connector	90980-11661	P25	Power Outlet Front RH	
J 8	Junction Connector	90980-10976	P26	Power Window Master SW	90980-11165
J 9	Junction Connector		P27	Pretensioner LH	90980-11862
J10	Junction Connector	90980-11661	P28	Pretensioner RH	
J11	Junction Connector		R 1	Radio and Player (Built-In Type Amplifier) or Stereo Power Amplifier (Separate Type Amplifier)	90980-10997
J12	Junction Connector		R 2	Radio and Player (Built-In Type Amplifier) or Stereo Power Amplifier (Separate Type Amplifier)	90980-10996
J13	Junction Connector	90980-11529	R 3	Rear Diff. Lock Control SW	90980-10631
J14	Junction Connector		R 5	Remote Control Mirror SW	90980-11450
K 1	Knock Sensor	90980-11166	R 6	Rheostat	90980-10216
K 2	Knock Sensor No.1		R 7	Rear Combination Light LH	90980-11399
K 3	Knock Sensor No.2		R 8	Rear Combination Light RH	
K 4	Keyless Buzzer	90980-11156	R 9	Rear Diff. Lock Detection SW	90980-11250
L 1	License Plate Light	90980-11075	R10	Rear Diff. Lock Motor	90980-11194
M 1	Mass Air Flow Meter	90980-11317	R11	Rear Door Speaker LH	90980-10935
M 2	Moon Roof Control Motor and Limit SW	90980-10789	R12	Rear Door Speaker RH	
M 3	Moon Roof Control Relay and SW	90980-10799	R13	Rear Heater Blower Motor	90980-10214
N 1	Noise Filter	90980-10843	R14	Rear Heater Blower Resistor	90980-10916
O 1	Oil Pressure SW	90980-11363	R15	Rear Heater Blower SW	90980-11296
P 1	Park/Neutral Position SW	90980-11332	R16	Rear Heater Relay	90980-35050
P 2	Parking Brake SW	90980-10871	R17	Rear Window Defogger	90980-10359
P 3	Personal Light	90980-10935	R18	Rear Window Defogger	
P 4	Power Window Control SW Front RH	90980-11947	R19	Rear Wiper Motor	90980-11194
P 5	Power Window Control SW Rear LH	90980-10789	R20	Remote Control Mirror LH	90980-11492
P 6	Power Window Control SW Rear RH		R21	Remote Control Mirror RH	
P 7	Power Window Master SW	90980-11791	R22	Remote Control Mirror SW	90980-11450
P 8	Power Window Motor Front LH	90980-11011	S 1	Starter	90980-11400
P 9	Power Window Motor Front RH		S 2	Starter	90980-9508
P10	Power Window Motor Rear LH	90980-10860	S 3	Shift Lock Control Computer	90980-11614
P11	Power Window Motor Rear RH		S 4	Stop Light SW	90980-11118
P13	Power Seat Control SW (Driver's Seat Lumbar Support)		90980-10127	T 1	2-4 Select Motor
P14	Power Seat Control SW (Driver's Side)	90980-10878	T 2	Throttle Position Sensor	90980-11261
P15	Power Seat Control SW (Front Passenger's Side)	90980-10876	T 3	2-4 Select SW	90980-10355
P16	Power Seat Motor (Driver's Seat Lumbar Support)	90980-10825	T 4	Tailgate Control SW	90980-11015
P17	Power Seat Motor (Driver's Seat Reclining Control)				
P18	Power Seat Motor (Driver's Seat Slide Control)				

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
T 5	Theft Deterrent Horn	90980-10619	V 6	VSV (EGR)	90980-11162
T 6	Transponder Key Amplifier	90980-10789	V 7	VSV (EVAP)	90980-11156
U 1	Unlock Warning SW (A/T)	90980-10795	V 8	VSV (Vapor Pressure Sensor)	
	Unlock Warning SW (M/T)	90980-10860	V 9	Vanity Light RH	90980-11368
V 1	Vapor Pressure Sensor	90980-11143	W 1	Washer Motor (w/o Daytime Running Light)	90980-11177
V 2	Vehicle Speed Sensor (Combination Meter)			Washer Motor and Washer Level Warning SW (w/ Daytime Running Light)	90980-11194
V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156	W 2	Water Temp. Sender (5VZ-FE)	90980-10359
V 4	VSV (2WD,ADD)	90980-11149		Water Temp. Sender (3RZ-FE)	90980-11428
V 5	VSV (4WD,ADD)	90980-11156			