


# STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

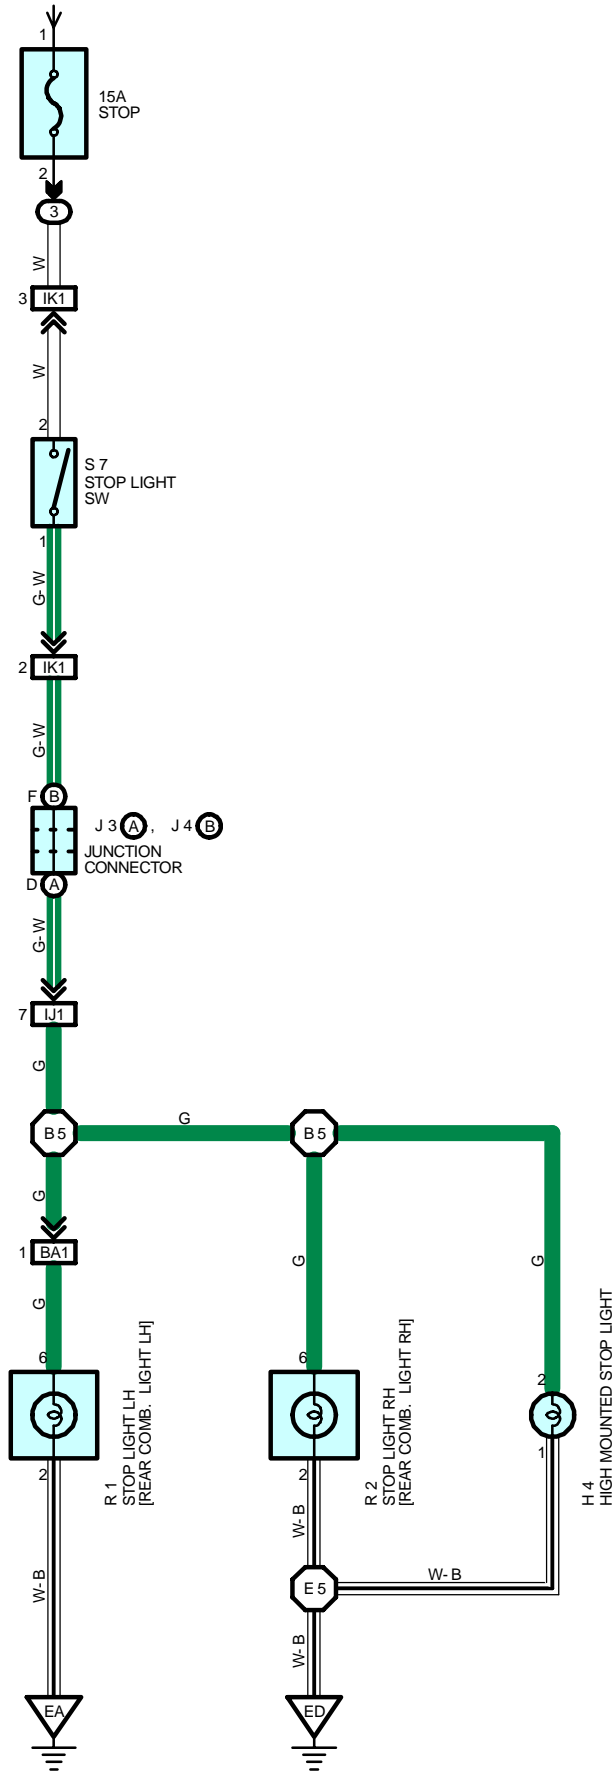

**SERVICE HINTS****S7 STOP LIGHT SW**

2-1 : Closed with the brake pedal depressed

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page	
H4	30	J4	B	33	R2	31
J3	A	33	R1	31	S7	33

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	40	Floor Wire and Instrument Panel Wire (Right Kick Panel)
IK1	40	Instrument Panel Wire and Switch Wire (Instrument Panel Brace LH)
BA1	42	Engine Room Main Wire and Floor Wire (Right Side of Room Partition Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
EA	36	Suspension Tower Rear LH
ED	36	Suspension Tower Rear RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	36	Floor Wire	B5	42	Floor Wire