


Engine Immobilizer System

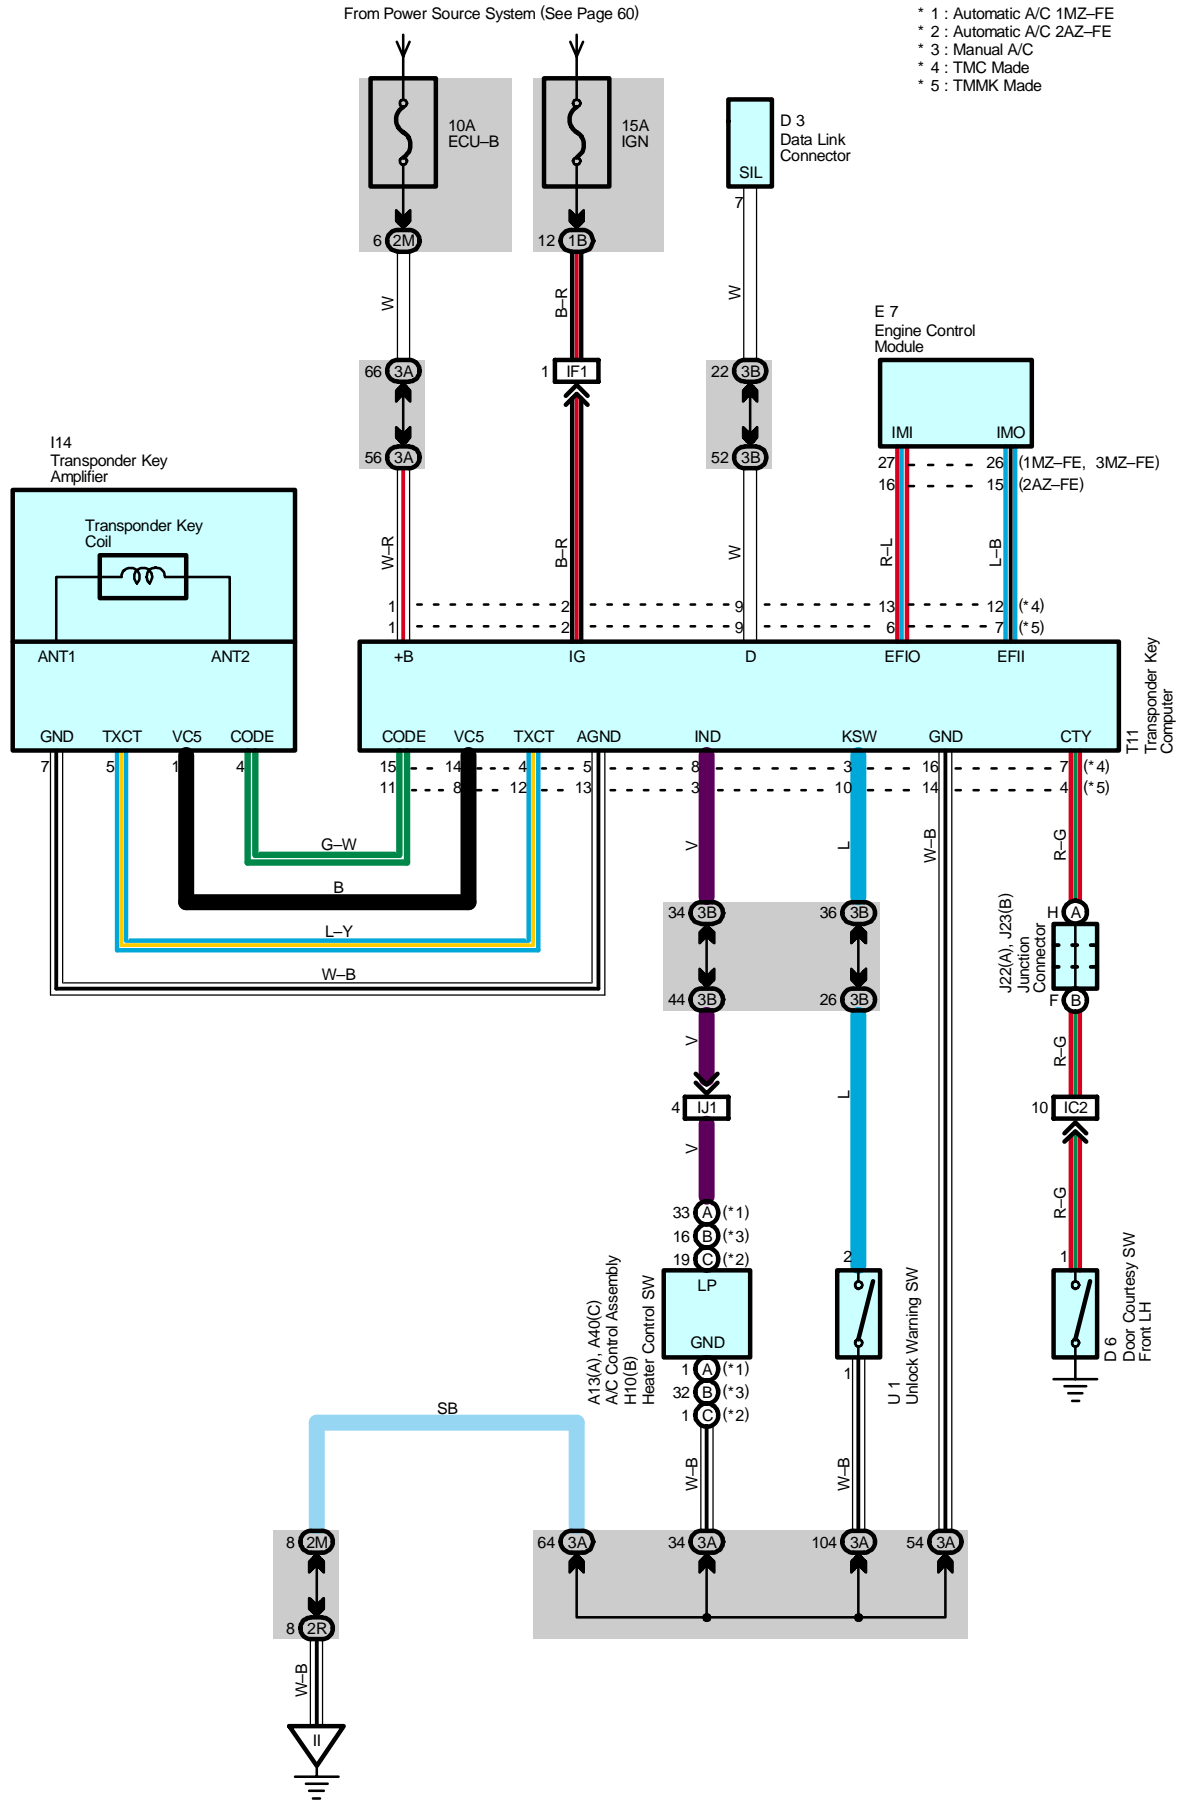

Service Hints

T11 Transponder Key Computer

- 1-Ground : Always approx. 12 volts
- 2-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 14 (TMMK Made), 16 (TMC Made)-Ground : Always continuity
- 10 (TMMK Made), 3 (TMC Made)-Ground : Continuity with the key in cylinder

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A13	A	40	E7		40	J23	B	41
A40	C	40	H10	B	41	T11		41
D3		40	I14		41	U1		41
D6		42	J22	A	41			

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
3A	34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	50	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IF1	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IJ1	52	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)

▽ : Ground Points

Code	See Page	Ground Points Location
II	50	Cowl Side Panel LH

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat