



Starting and Ignition for 1MZ-FE and 3MZ-FE

Service Hints

I15 Ignition SW

- 2-1 : Closed with the ignition SW at ST position
- 7-6 : Closed with the ignition SW at ON or ST position
- 7-8 : Closed with the ignition SW at ST position

A4 Park/Neutral Position SW

- 4-5 : Closed with the A/T shift lever in P or N position

S2 (A), S3 (B) Starter

Point closed with the Park/Neutral position SW at P or N position and the ignition SW at ST position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	36 (*1)	I4	37 (*1)	N1	37 (*1)
E10	40	I5	37 (*1)	S2	A 37 (*1)
I1	37 (*1)	I6	37 (*1)	S3	B 37 (*1)
I2	37 (*1)	I15	41		
I3	37 (*1)	J2	41		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H		
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
1L		
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF6		
IL1	52	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EF	46 (*1)	Right Side of Cylinder Head
II	50	Cowl Side Panel LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E6	46 (*1)	Engine Wire	E9	46 (*1)	Engine Wire
E7			I8	52	

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat

