



AIR-FUEL RATIO (A/F) SENSOR (A/T)

SF106-01

INSPECTION

INSPECT HEATER RESISTANCE OF A/F SENSORS

(Bank 1 sensor 1, Bank 2 Sensor 1)

- Disconnect the A/F sensor connector.
- Using an ohmmeter measure the resistance between terminals +B and HT.

Resistance:

At 20°C (68°F)	0.8 – 1.4 Ω
At 800°C (1,472°F)	1.8 – 3.2 Ω

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (440 kgf·cm, 31 ft·lbf)

- Reconnect the A/F sensor connector.