





# COMBINATION METER

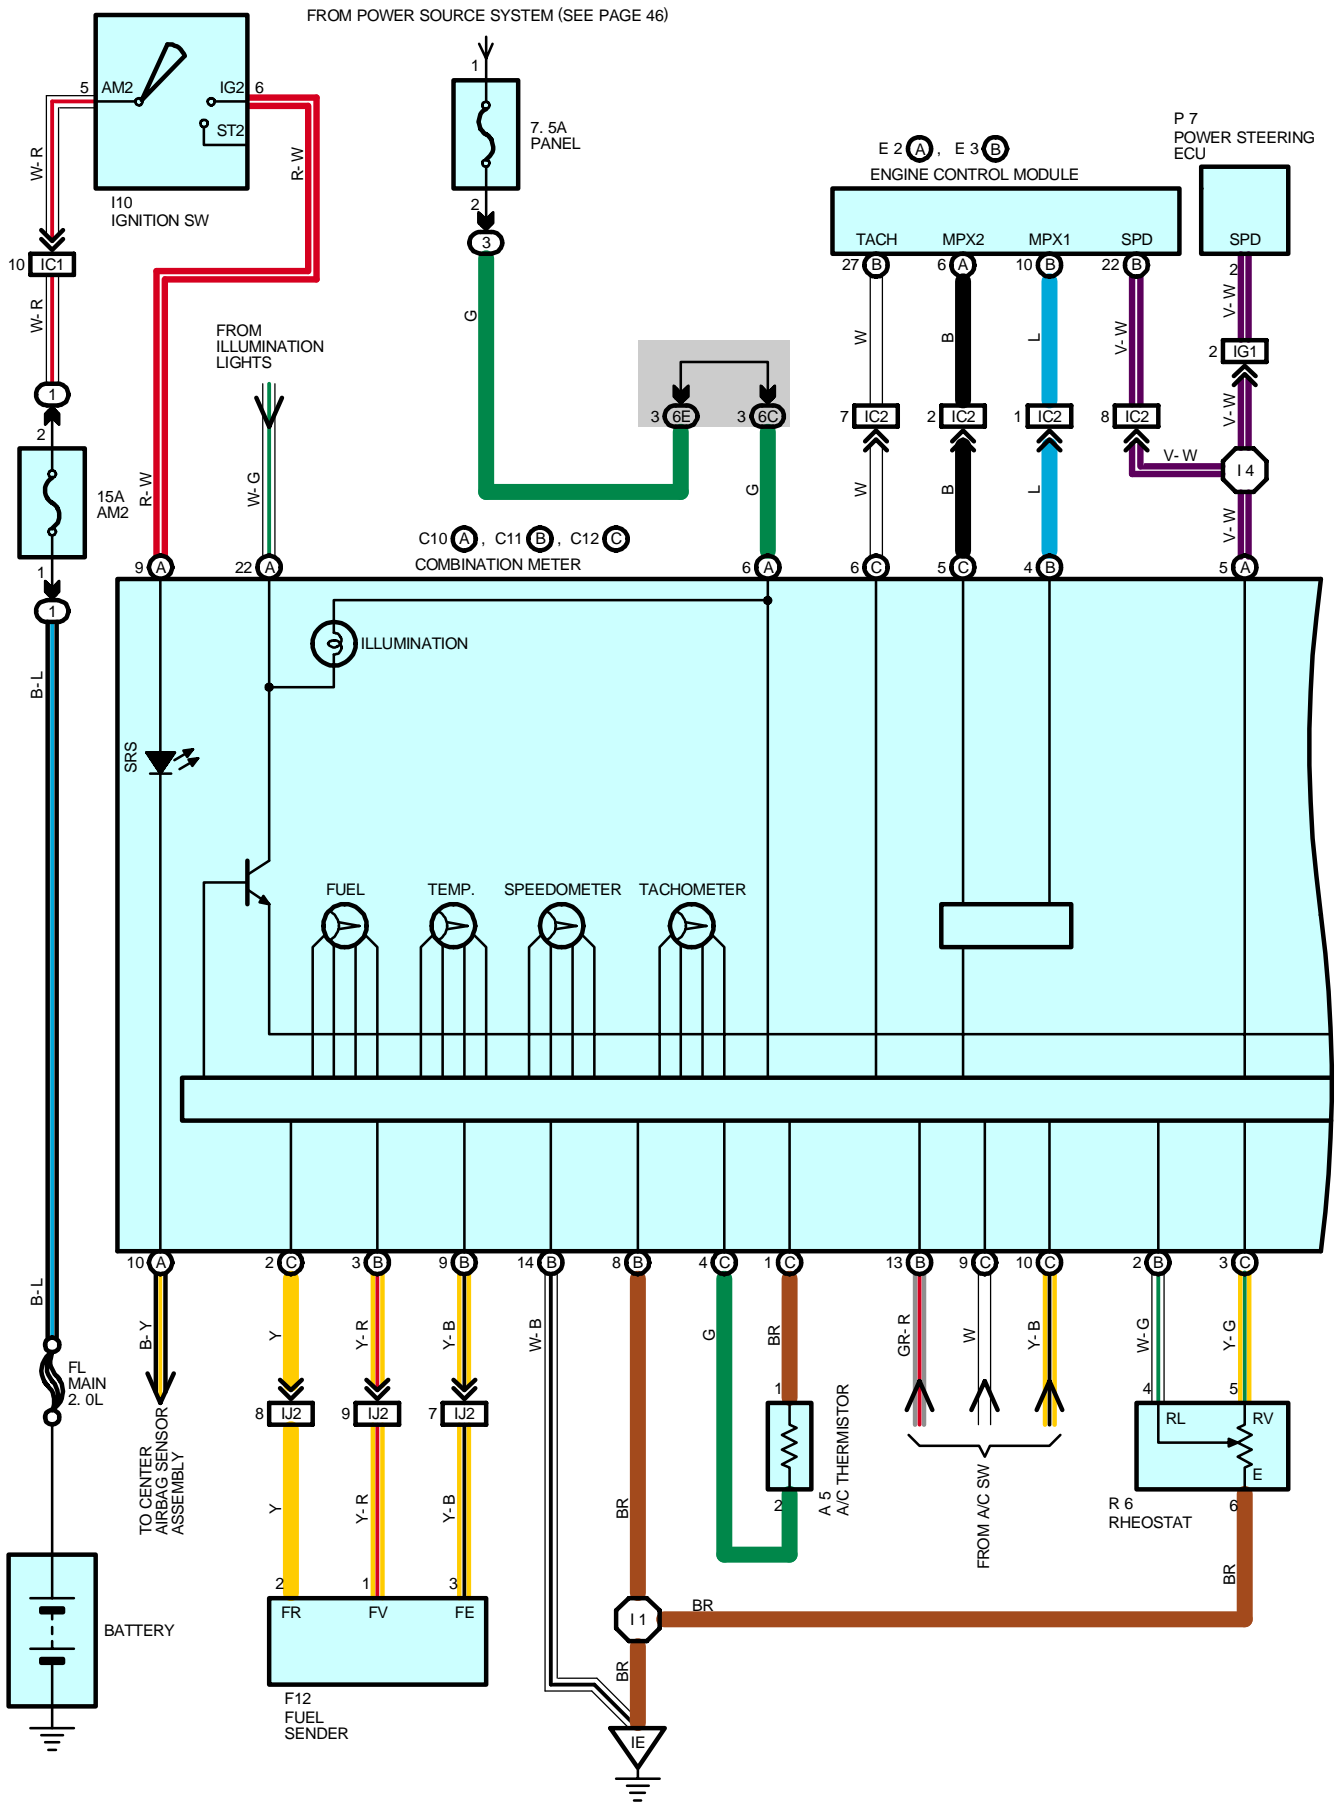

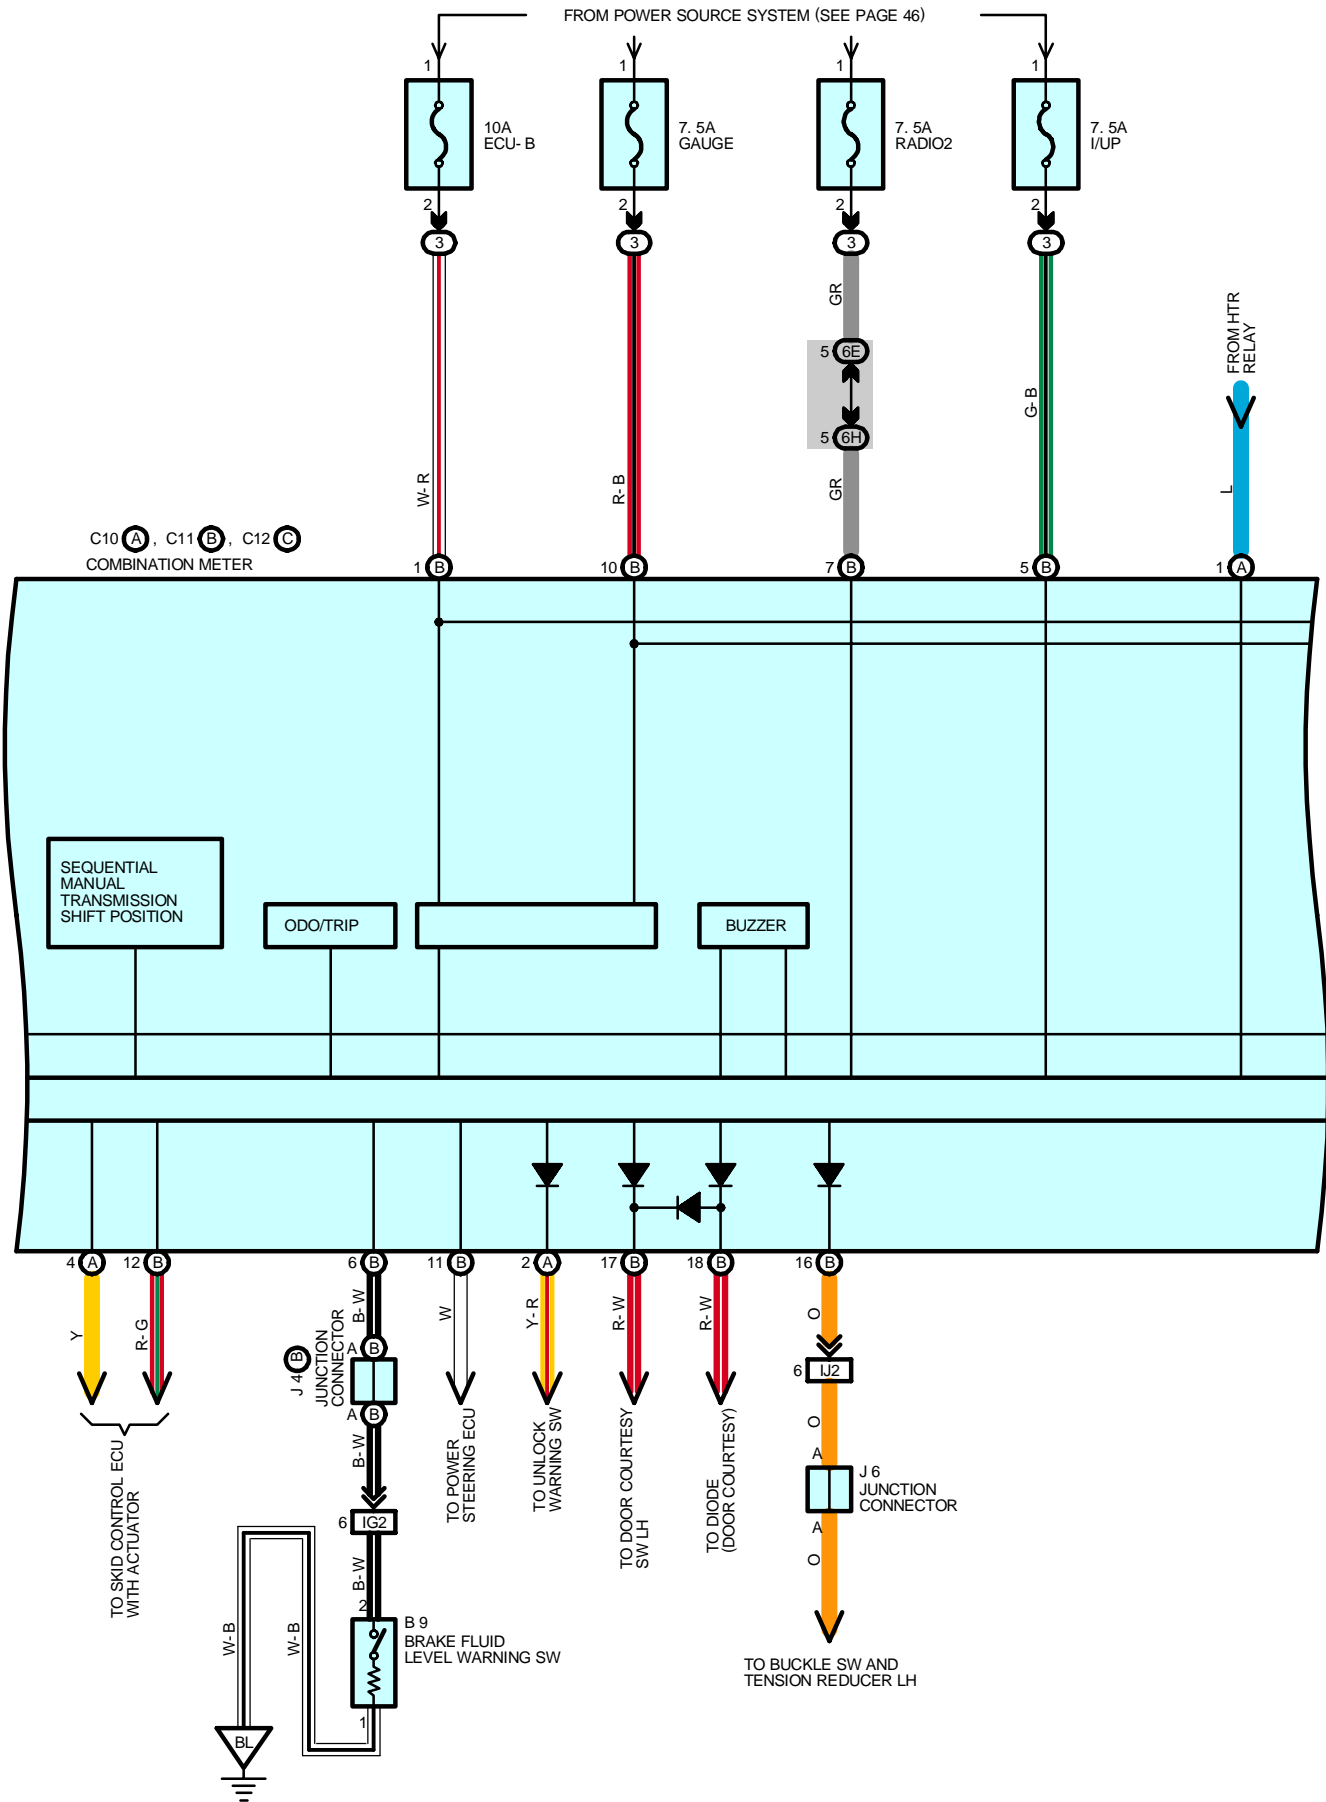

# COMBINATION METER

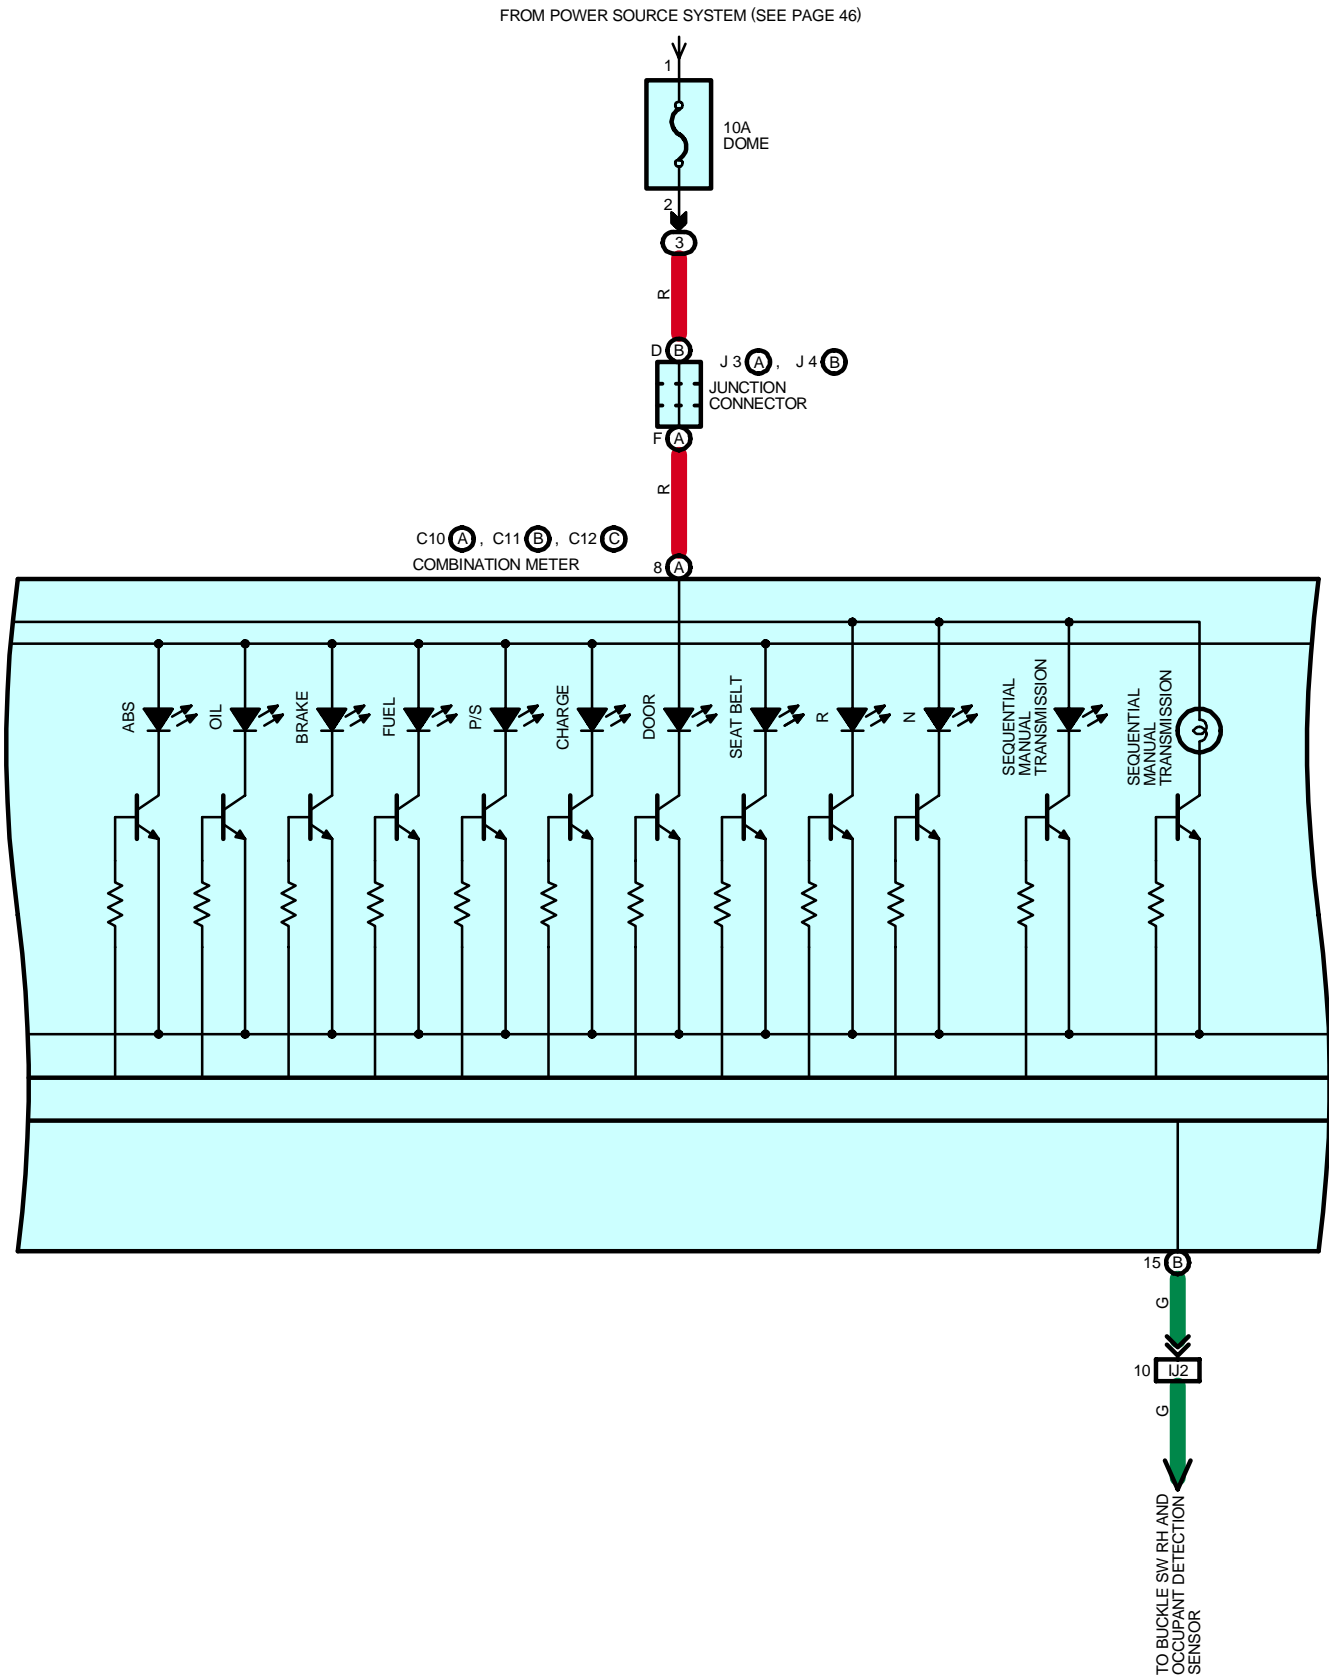

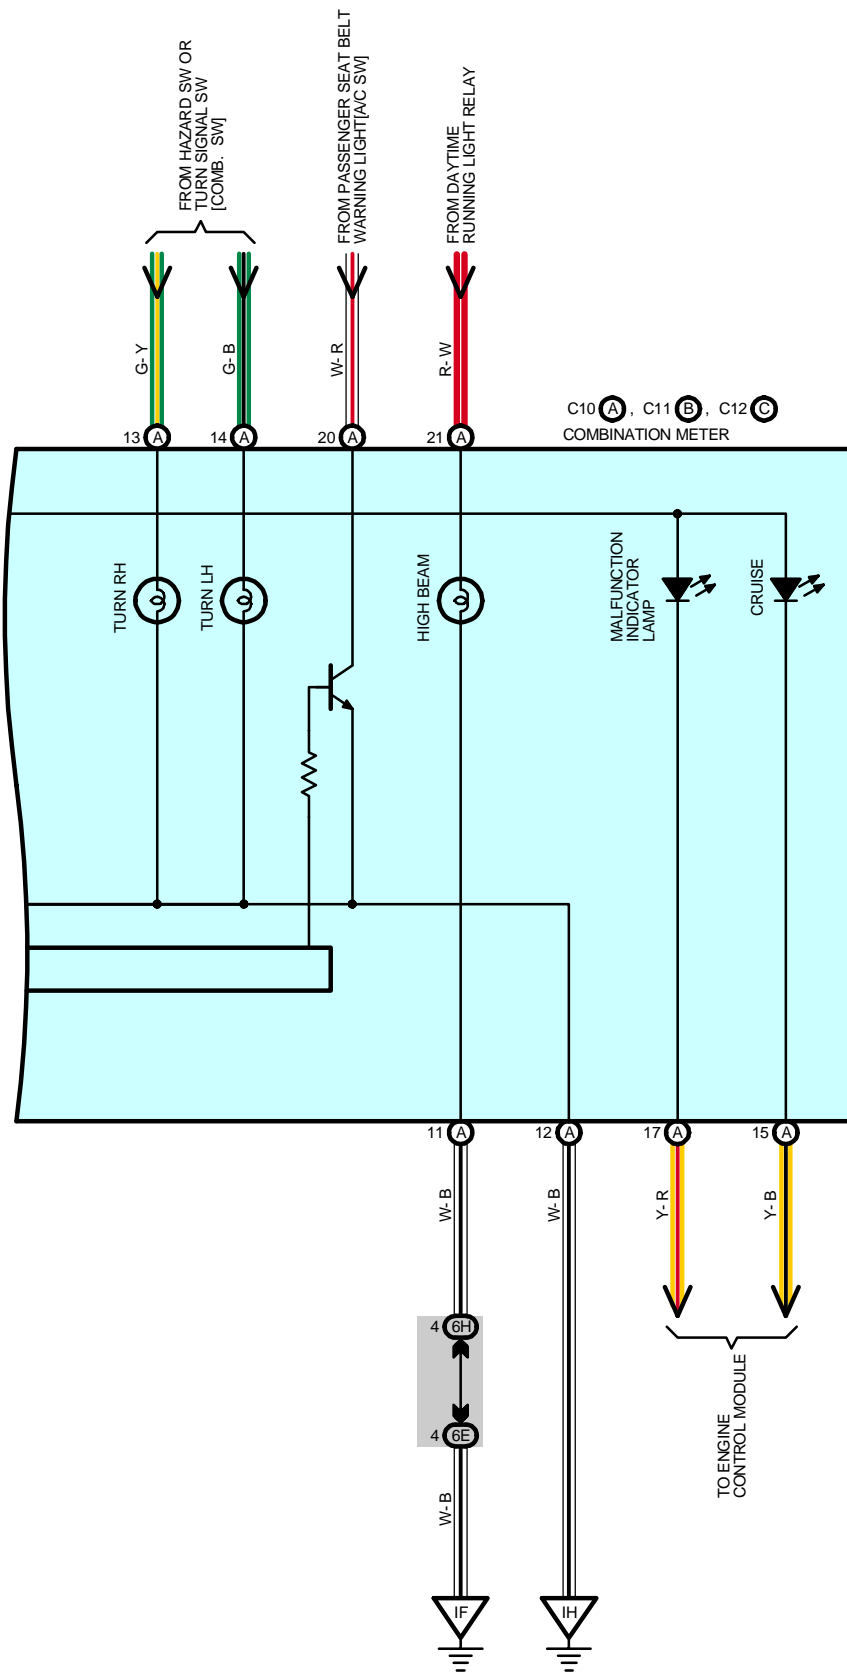

# COMBINATION METER

## SERVICE HINTS

### C10 (A), C11 (B), C12 (C) COMBINATION METER

- (B) 5-GROUND : Approx. **12** volts with the rear window defogger SW [A/C SW ] on  
 Approx. **12** volts with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position  
 Approx. **12** volts with the daytime running light operat
- (A) 8, (B) 1-GROUND : Always approx. **12** volts
- (A) 9, (B) 10-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- (B) 7-GROUND : Approx. **12** volts with the ignition SW at **ACC** position
- (B) 8, (B) 14, (A) 12, (A) 11-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A5	32	E2	A 34	J4	B 33
B9	34	E3	B 34	J6	35
C10	A 32	F12	34	P7	35
C11	B 32	I10	33	R6	33
C12	C 32	J3	A 33		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
3	24	R/B No.3 (Left Side of Instrument Panel)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6C	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6E		
6H		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IC2		
IG1	40	Luggage Room Wire and Instrument Panel Wire (Under the Instrument Panel Center)
IG2		
IJ2	40	Floor Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Left Kick Panel
IF	38	Instrument Panel Brace LH
IH	38	Right Kick Panel
BL	42	Suspension Tower Front LH

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	40	Instrument Panel Wire	I4	40	Instrument Panel Wire

